

Troubleshooting

Troubleshooting Flowchart — A/C System (cont'd)

(From page 15-53)

Reconnect the 2-P connector to the pressure switch.

Disconnect the 2-P connector from the thermostat switch.

Connect a jumper wire between the BLU/YEL terminal and body ground.

Do both fans and the compressor run ?

NO

Repair open in BLU/YEL wire between pressure and thermostat switches.

YES

Connect a jumper wire between the BLU/YEL and BLU/RED terminals.

Do both fans and the compressor run ?

YES

Check evaporator temperature. If temperature is above 41 °F, replace A/C thermostat.


NO



Turn the ignition switch OFF.

Reconnect the 2-P connector to the thermostat switch.

Disconnect the connector (Button type: 14-P, lever type: 10-P) from the heater control panel.

(To page 15-55)

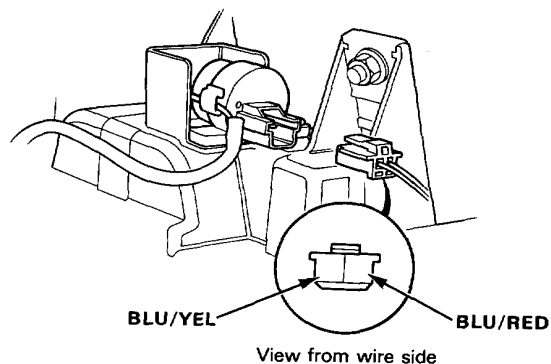


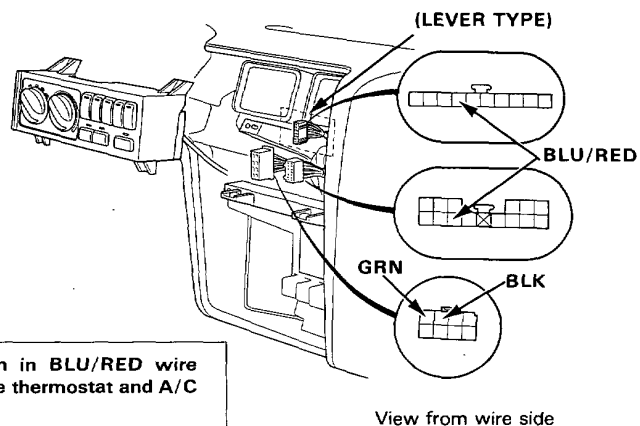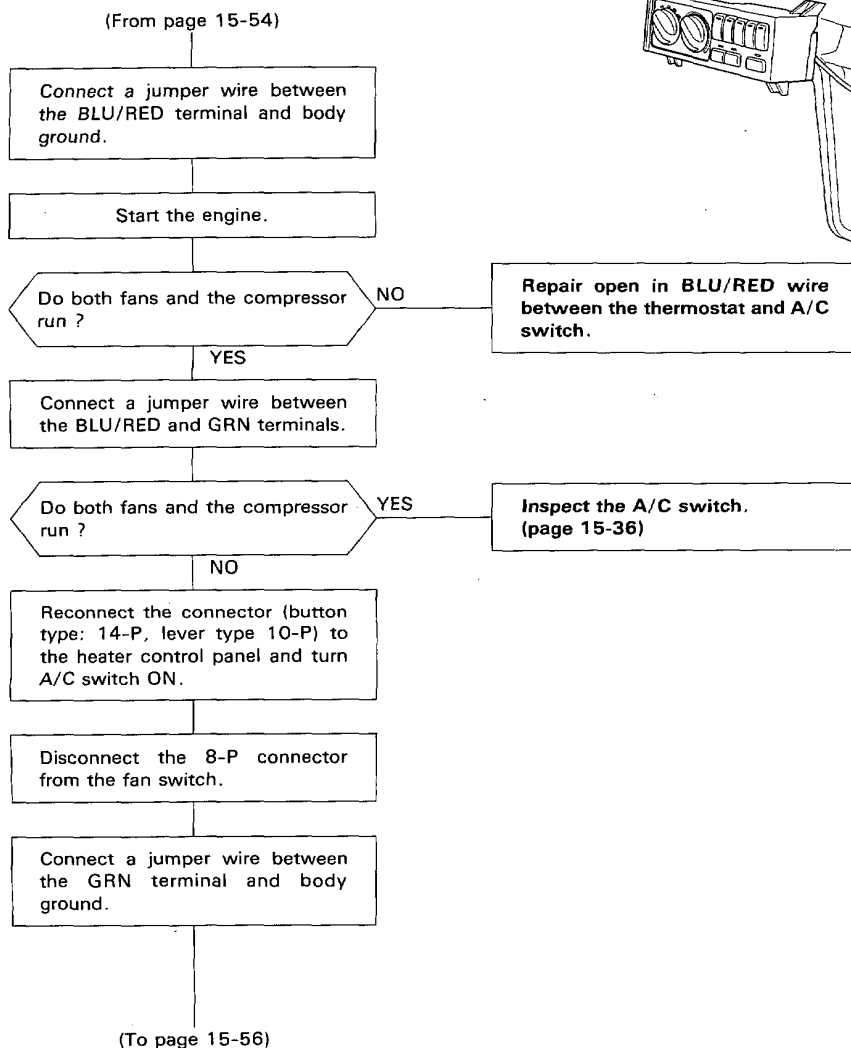

(cont'd)

Troubleshooting



Troubleshooting Flowchart — A/C System (cont'd)

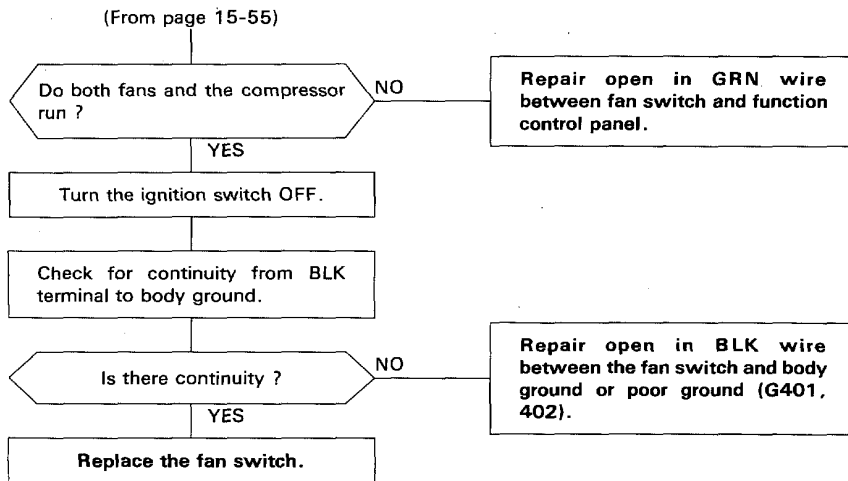



Troubleshooting Flowchart — Compressor

NOTE: Check for blown No. 7 (7.5 A) fuse

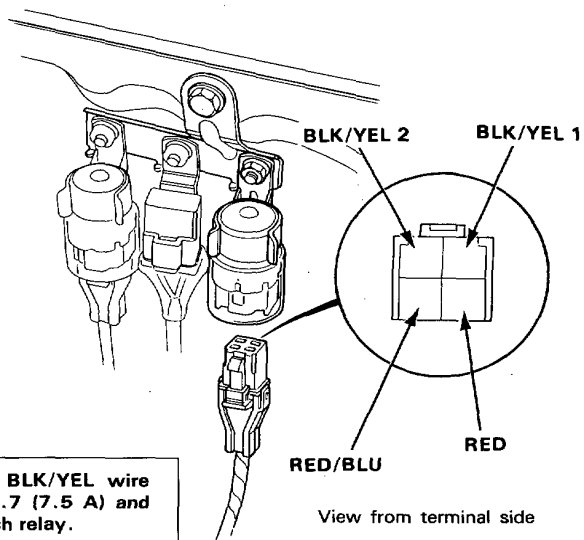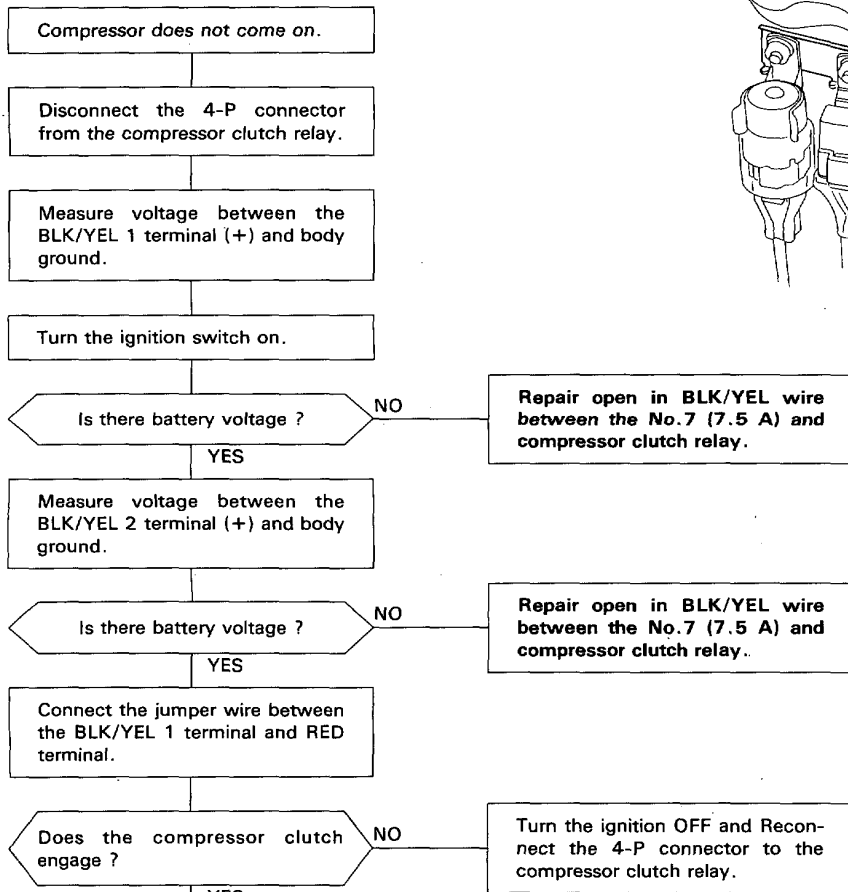

PGM-FI, PGM-CARB Engine: To page 15-58
Carbureted Engine: To page 15-59

(To page 15-60)

(cont'd)